

Kondensaadi teke aurutrassides											
Arvestades soojuskadu trassides iga 50m kohta											
Auru rõhk	Toru mõõt (mm)										Korrekteerimise faktor -18 °C
	50	65	80	100	125	150	200	250	300	350	
1	5	9	11	16	22	28	44	60	79	94	1,39
2	6	10	13	19	25	33	49	69	92	108	1,35
3	7	11	14	20	25	36	54	79	101	120	1,32
4	8	12	15	22	30	39	59	83	110	131	1,29
5	8	13	17	24	33	42	63	70	119	142	1,28
6	9	13	18	25	34	43	66	93	124	147	1,27
7	9	14	18	26	35	45	68	97	128	151	1,26
6	9	14	19	27	37	47	71	101	134	158	1,25
9	10	15	20	28	38	50	74	105	139	164	1,24
10	10	16	20	29	40	51	77	109	144	171	1,24
12	10	17	22	31	42	54	84	115	152	180	1,22
14	11	17	23	32	44	57	85	120	160	189	1,22
16	12	19	24	35	47	61	91	128	172	203	1,21
18	17	23	31	45	62	84	127	187	355	305	1,21
20	17	26	35	51	71	97	148	220	302	362	1,2
25	19	29	39	56	78	108	164	243	322	400	1,19
30	21	32	41	62	86	117	179	265	364	437	1,18
40	22	34	46	67	93	127	194	287	395	473	1,16
50	24	37	50	73	101	139	212	214	432	518	1,15
60	27	41	54	79	135	181	305	445	626	752	1,15